 


EN




QUICK RELEASE BRACKET


PARTS LIST

		
AX1	BX1	CX1
		
EX1	FX1	GX2
		
HX2	IX4	


STEP 1.

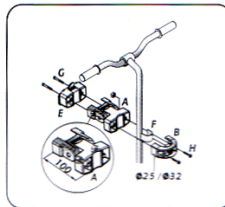

STEP 2.

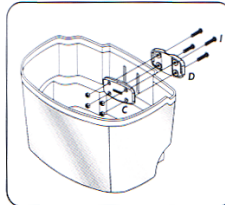


STEP 3.

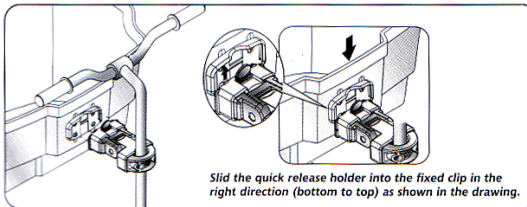


Slid the quick release holder into the fixed clip in the right direction (bottom to top) as shown in the drawing.

STEP 4-1.

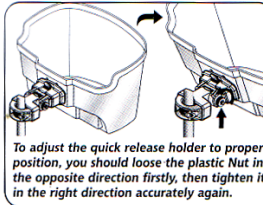


To adjust the quick release holder to proper position, you should loose the plastic Nut in the opposite direction firstly, then tighten it in the right direction accurately again.

STEP 4-2.

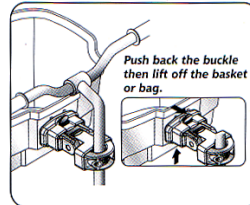

Push back the buckle then lift off the basket or bag.

 DE




Schnellverschlusshalter


Teilleiste

		
AX1	BX1	CX1
		
EX1	FX1	GX2
		
HX2	IX4	


STEP 1.

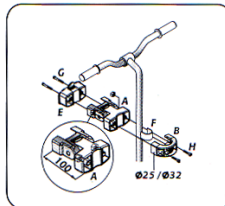

STEP 2.

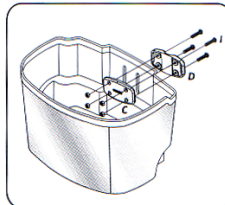


STEP 3.

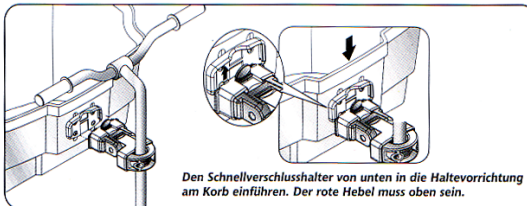


Den Schnellverschlusshalter von unten in die Haltevorrichtung am Korb einführen. Der rote Hebel muss oben sein.

STEP 4-1.

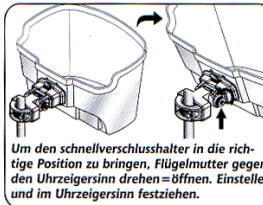

Um den schnellverschlusshalter in die richtige Position zu bringen, Flügelmutter gegen den Uhrzeigersinn drehen = öffnen. Einstellen und im Uhrzeigersinn festziehen.

STEP 4-2.

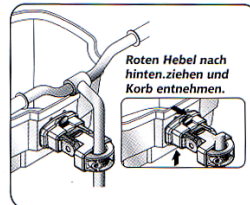

Roten Hebel nach hinten ziehen und Korb entnehmen.

DE Bedienungsanleitung
GB Manual
NL Gebruiksaanwijzing
FR Mode d'Emploi
ES Instrucciones de uso
IT Manuale di istruzioni
PT Instruções de Utilização
NO Brukeranvisning
DK Brugsanvisning

SE Bruksanvisning
FI Käyttöohje
IS Handbók
GR ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΕΩΣ
PL Instrukcja montażu
CZ Návod k použití
HU Használati útmutató
SK Navod na použitie
RU инструкция по применению

UA Інструкція з експлуатації
XS Uputstvo za upotrebu
SI Navodila za uporabo
HR Uputstvo za uporabu
TR Kullanma kılavuzu
CN 說明書
JP 使用方法
www.m-wave-bike.com

art. 431571



messingschlagler
Hassbergstr. 45
96148 Baunach - Germany