 


EN




QUICK RELEASE BRACKET


PARTS LIST

		
AX1	BX1	DX1
		
EX1	FX1	GX2
		
HX2	IX4	


STEP 1.

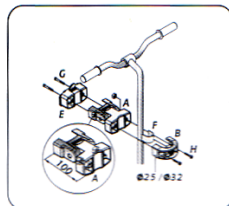


STEP 3.

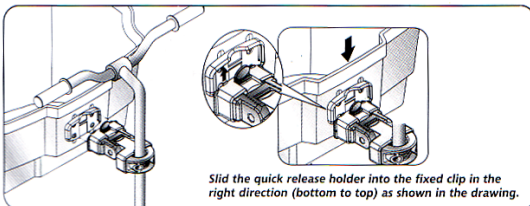


STEP 2.

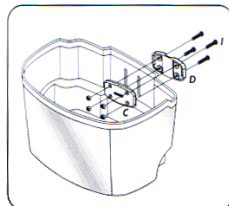


STEP 4-1.

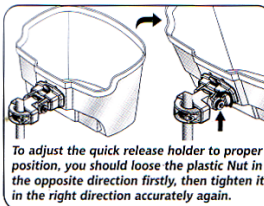

STEP 4-2.

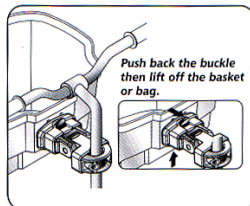

DE

 


Schnellverschlusshalter


Teilliste

		
AX1	BX1	DX1
		
EX1	FX1	GX2
		
HX2	IX4	


STEP 1.

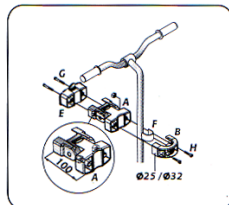


STEP 3.

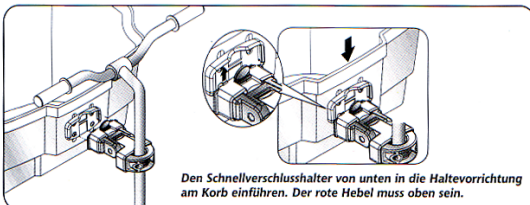


STEP 2.

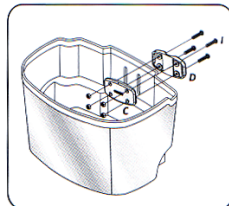

STEP 4-1.

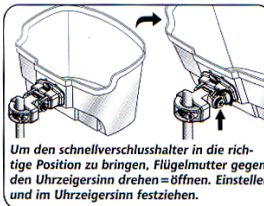

STEP 4-2.

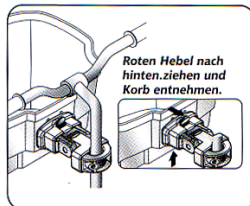

DE Bedienungsanleitung
EN Manual
NL Gebruiksaanwijzing
FR Mode d'Emploi
ES Instrucciones de uso
IT Manuale di istruzioni
PT Instruções de Utilização
NO Brukeranvisning
DA Brugsanvisning

SV Bruksanvisning
FI Käyttöohje
IS Handbók
EL ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΕΩΣ
PL Instrukcja montażu
CS Návod k použití
HU Használati útmutató
SK Nvod na použitie
RU инструкция по применению

UK Інструкція з експлуатації
SR Uputstvo za upotrebu
SL Navodila za uporabo
HR Uputstvo za uporabu
TR Kullanma kılavuzu
ZH 說明書
JA 使用方法
www.m-wave-bike.com

art. 431571



messingschlag
Hassbergstr. 45
96148 Baunach - Germany