

Manual ATLAS K 50

Betriebsanleitung ATLAS K 50

M-WAVE


FUNCTIONS / FUNKTIONEN

Approval number
Genehmigungsnummer



- 1) 1x = 30 Lux
2x = 15 Lux
3x = Aus/Off


1) ON/OFF,
battery indicator / Batterie-Indikator

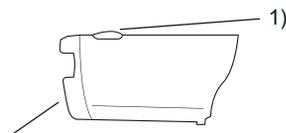

Approval number
Genehmigungsnummer

CHANGE BATTERIES / BATTERIEWECHSEL

FRONT

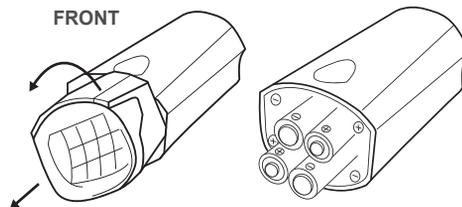

4x Micro AAA - 1,5V
4x AAA accumulator/Akku - 1,2V

REAR




Approval number
Genehmigungsnummer


2x Micro AAA - 1,5V or/oder
2x AAA accumulator/Akku - 1,2V

MOUNTING / MONTAGE

FRONT

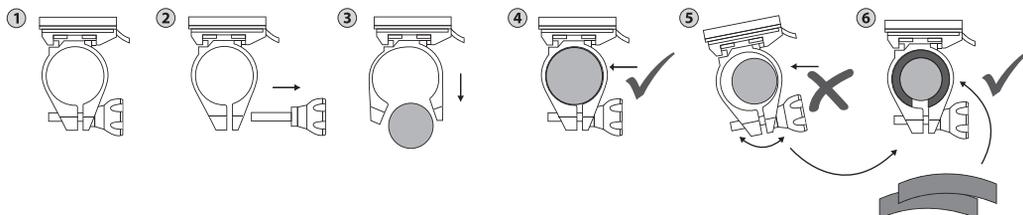


REAR

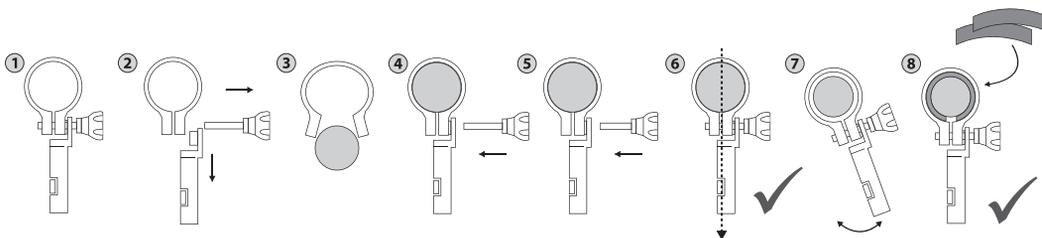

Orientation to the longitudinal axis
Ausrichtung zur Fahrzeuglängsachse


FRONT

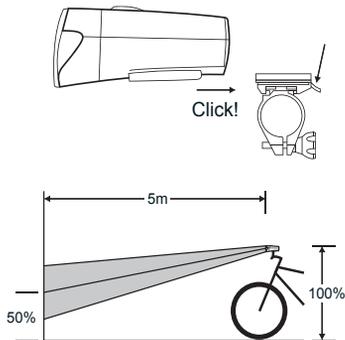

EN

1. When the battery indicator light turns on, the batteries must be changed or, if rechargeable, charged immediately.
2. Before every use of the light, please make sure the batteries are not flat.
3. Tested and approved in line with German national road traffic regulations.
4. The lamp set must be firmly connected to the bicycle. The light distribution must not be obstructed by any part of the vehicle.
5. Upon failure of the light-emitting diode, the complete lighting unit needs to be exchanged.

REAR

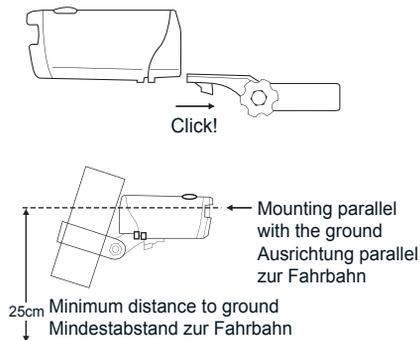

DE

1. Bei Aufleuchten des Batterie-Indikators müssen die Batterien umgehend ausgetauscht bzw. bei Verwendung von AAA Akkus, die Akkus umgehend aufgeladen werden.
2. Vor jeder Fahrt vergewissern, dass die Batterien bzw. Akku nicht leer sind!
3. StVZO geprüft und in Deutschland für den Straßenverkehr zugelassen.
4. Die Lampen müssen fest mit dem Fahrrad verbunden sein und die Lichtverteilung darf nicht verdeckt sein.
5. Bei Ausfall der Leuchtdiode muss die gesamte Leuchteinheit ausgetauscht werden.

