


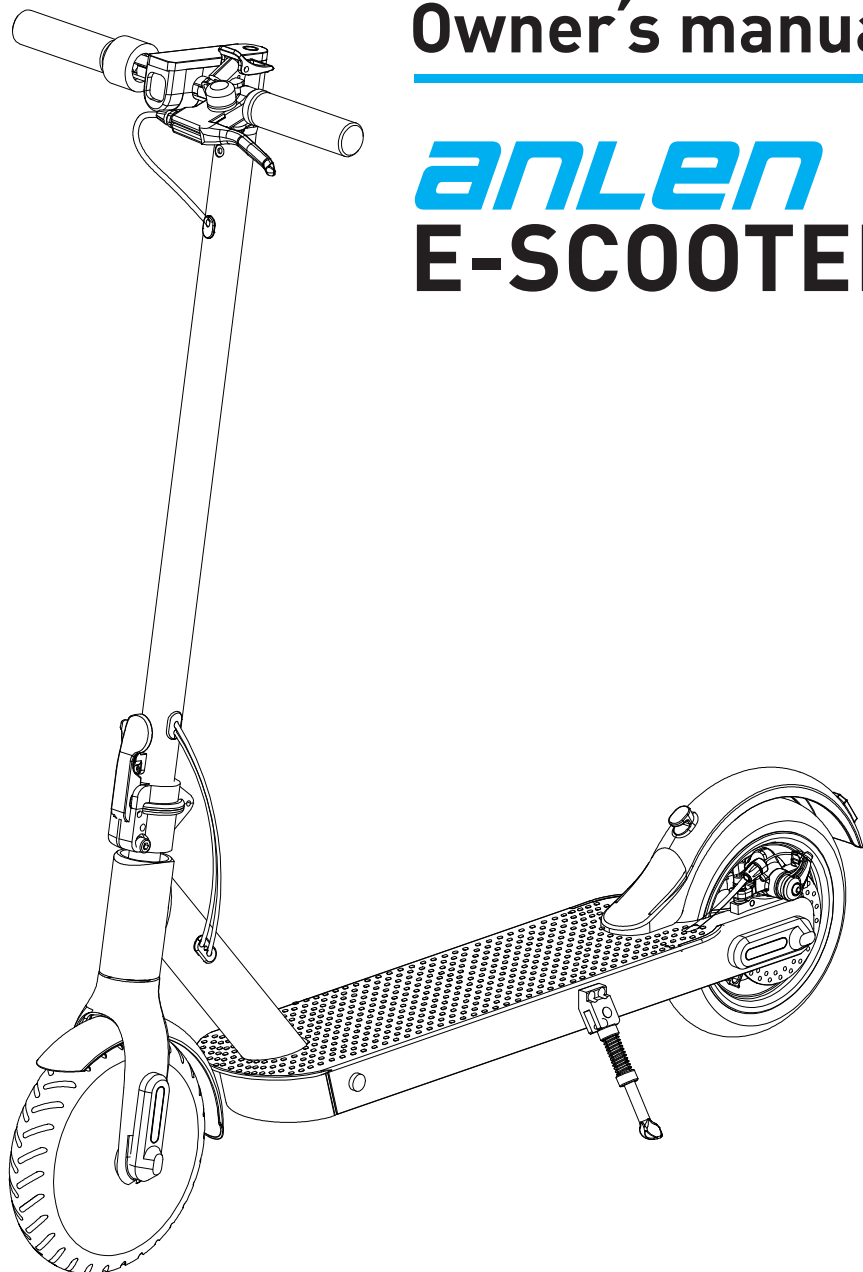


Owner's manual

anlen **E-SCOOTER**

EN


1. Package content

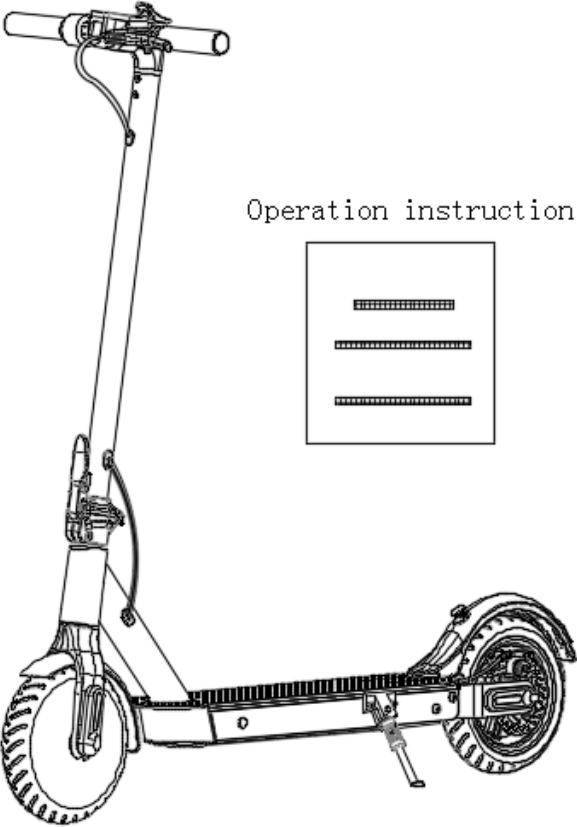

Screw x 4



Hexagon Wrench

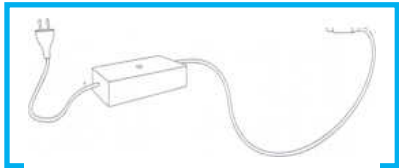


Charging adapter

Carefully check the package content. If anything is missing or damaged, please contact your local customer service for support.

2. Technical data


Dimensions (length/width/height)	1080*430*1140mm unfolded/490mm folded
Weight	12.7KG
Max. vehicle payload (rider+luggage)	100KG
Max. speed	20KM/H
Range (km)	15-18KM (measured at 25°/15km/h/65kg payload)
Applicable terrain	Flat road
Rated Voltage (VDC)	36V
Max charging voltage (VDC)	42V
Charging Rated current (A)	1.5A
Charging time	5-6H
Rated power (W)	250
Max power	500W

3. Product overview

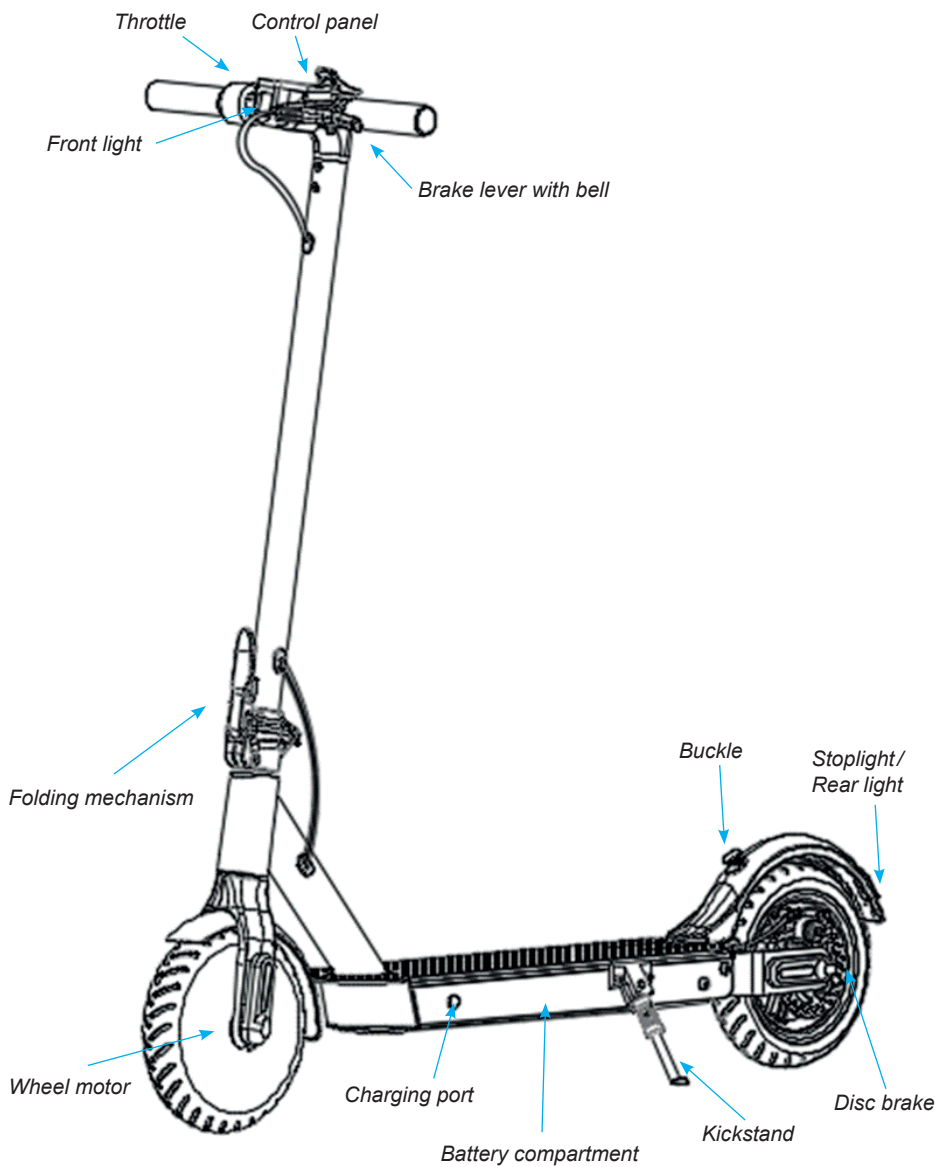


4. Assembly & Setup

1

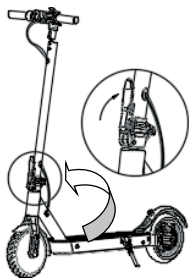


Unfold the scooter close & secure the folding mechanism.

2

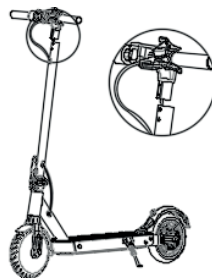

Install the handlebar on the steering tube.



3

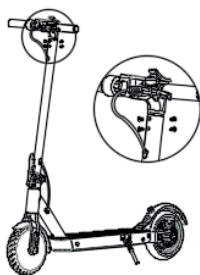


Use the hex wrench supplied in the packing box to lock screws on both sides.

max. torque 5Nm


Charger connection

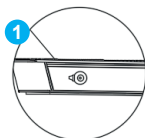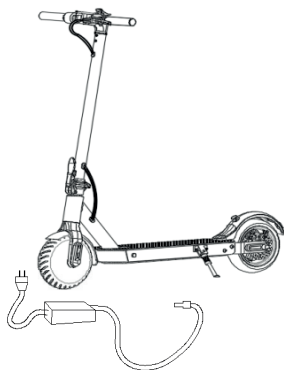

Open the rubber stopper

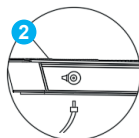


Insert the charging plug

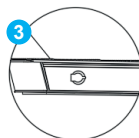


After checking, close the rubber stopper

5. The control panel

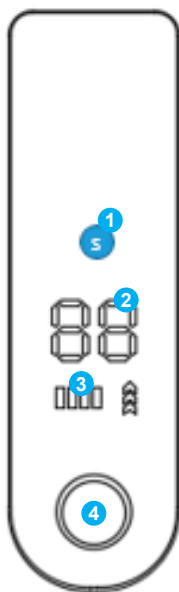


Mode indicator 1	Low-speed modus (green light) High-speed modus (red light)
Speed display 2	Showing current speed while riding. When low speed mode is selected, the max speed is 12km/h. When high speed mode is selected, the max speed is 20km/h.
Battery indicator 3	There are four electric lights to indicate the charging condition of the battery. When 4 lights are on, the capacity is between 100% - 75%; When 3 lights are on, the capacity is between 74% - 50%. When 2 lights are on, the capacity is between 49% - 25%. When 1 light is on, the capacity is between 24% - 00%. When the light is flashing, the battery is almost empty. Please recharge as soon as possible. When the battery is empty, the four lights are off, and the scooter will slide to the natural stop by inertia, please recharge the scooter before using.
Power button 4	Press the button 1x to activate the Scooter. When the scooter is activated, another short press will turn the light on / off. When the scooter is activated, double-click will switch from low-speed mode to high-speed mode. Press the button for 2 seconds to switch the scooter off.

6. How To Ride

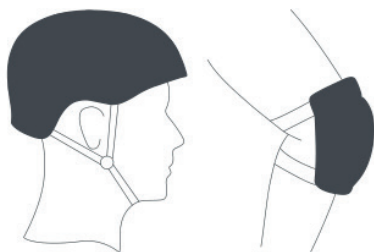

Wear helmet and knee pads while riding the Scooter

1

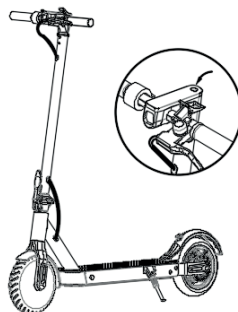


Check the battery status and the brakes before each ride.

2




Step on the deck with one foot, and slowly kick off the other on the ground.

3

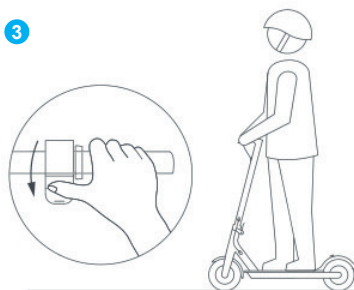


*When the scooter starts to move, put both feet on the deck and press the accelerator (the accelerator initiates once the speed exceeds 5km/h)
Turn on the power and check the power indicator*

4

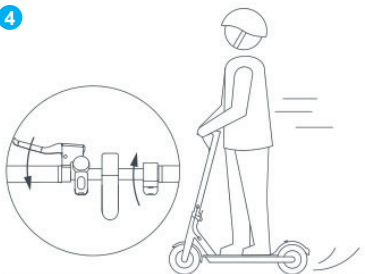

Release the throttle to stop acceleration. Energy recovery system automatically initiates to help slowing down. Use the brake lever to stop.

5

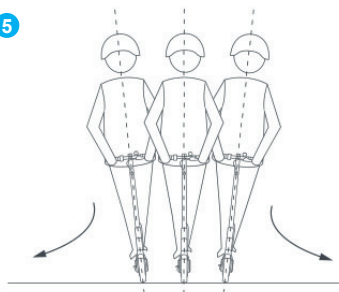


Tilt your body to the steering direction as you turn

7. Safety Reminder

- When you use this vehicle for the first time, please ride it in a safe environment without obstacles or traffic. Please get familiar with the vehicle before you use it in public places.
- This electric scooter is a leisure device. But once used in a public area, they'll be seen as vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual and traffic laws and regulations set forth by government and regulatory agencies.
- At the same time, you should understand that risks cannot be entirely avoided as others may violate traffic regulations and drive incautiously, and you're exposed to road accidents just as when you're walking or cycling. The faster the scooter is, the longer it takes to stop. On a smooth surface, the scooter may slip, lose balance, and even result in a fall. Thus it is crucial that you use caution, keep proper speed and distance, especially so when you're unfamiliar with the place.
- Respect pedestrians right of way. Try not to startle them while driving, especially children. When you ride from behind pedestrians, ring your bell to give them a heads-up and slow your scooter to pass from their left (applicable to countries where vehicles drive on the right). When you ride across pedestrians, keep to the right at a low speed.
- Closely follow the safety instructions in the manual especially in countries without relevant laws and regulations for electric scooters.
- Do not lend your scooter to persons who don't know how to use it.
- Check the scooter before every use. When you note loosen parts, low battery alerts, flat tires, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.

8. Folding and Carrying

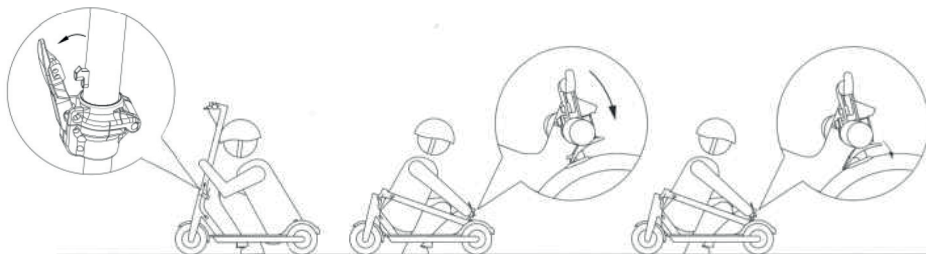

Make sure that the scooter's turned off. To fold, unlock the folding mechanism, and bend the handlebar stem to hook the buckle on the rear mudguard. To open, press the trigger to remove from the buckle, erect the handlebar and lock the folding structure.



Carry

Hold the handlebar stem with either one hand or both hands to carry.

9. Daily Care and Maintenance

Cleaning and storage

If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth.


Notes: do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents. Do not wash the scooter with a pressure washer. During cleaning, make sure that the scooter is turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

When the scooter is not in use, keep it indoors where it is dry and cool. Do not store it outdoor for long time. Excessive sunlight, overheating and overcooling accelerate tire aging and compromise the scooter and the battery pack's lifespan.

Battery maintenance

- 1 Use original battery packs, use of other models or brands may cause safety issues;
- 2 Do not touch the contacts. Do not dismantle or puncture the casing. Keep the contacts away from metal objects to prevent short circuit which may result in battery damage or even injuries and death.
- 3 Use original power adapter to avoid potential damage or fire;
- 4 Mishandling of used batteries may do tremendous harm to the environment. To protect natural environment, please follow local regulations to properly dispose used batteries.
- 5 After every use, fully charge the battery to prolong its lifespan.
Do not place the battery in an environment where the ambient temperature is higher than 50°C or lower than -20°C (e.g., do not leave the scooter or the battery pack in a car under direct sunlight for an extended time). Do not throw the battery pack into fire as it may lead to battery failure, battery overheating, and even another fire. If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.
Always charge before exhausting the battery to prolong the battery's lifespan. The battery pack performs better at normal temperature, and poor when it is below 0°C. For instance, when it is below -20°C, the riding range is only half or less at normal state. When the temperature rises, the riding range restores.

Adjusting the disc brake

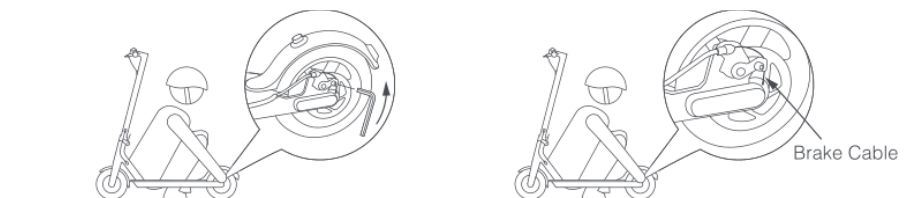

If the brake is too tight, use the M4 hexagon wrench to loosen the screws on the caliper, and slightly send back the brake cable to shorten the exposed length, then tighten the screws. If the brake is too loose, loosen the screws, and slightly pull out the brake cable to lengthen the exposed length, then tighten the screws.

Messingschlager GmbH & Co. KG hereby declares that the e-scooter Anlen E9X, item number 659905, is in compliance with the Directives 2014/35/EU; 2014/30/EU and 2011/65/EU(ROHS).

The full text of the EU-Declaration of Conformity is available at: <https://www.messingschlager.com>

If you have any questions or require more information about our products, please contact our customer service or send us an email.

messingschlager


**Messingschlager GmbH & Co. KG,
Haßbergstraße 45
96148 Baunach
Germany**

**Tel: +49 (0)9544/944445
mail: kontakt@messingschlager.com
www.messingschlager.com**

EN


Bedienungs- anleitung

anlen E-SCOOTER

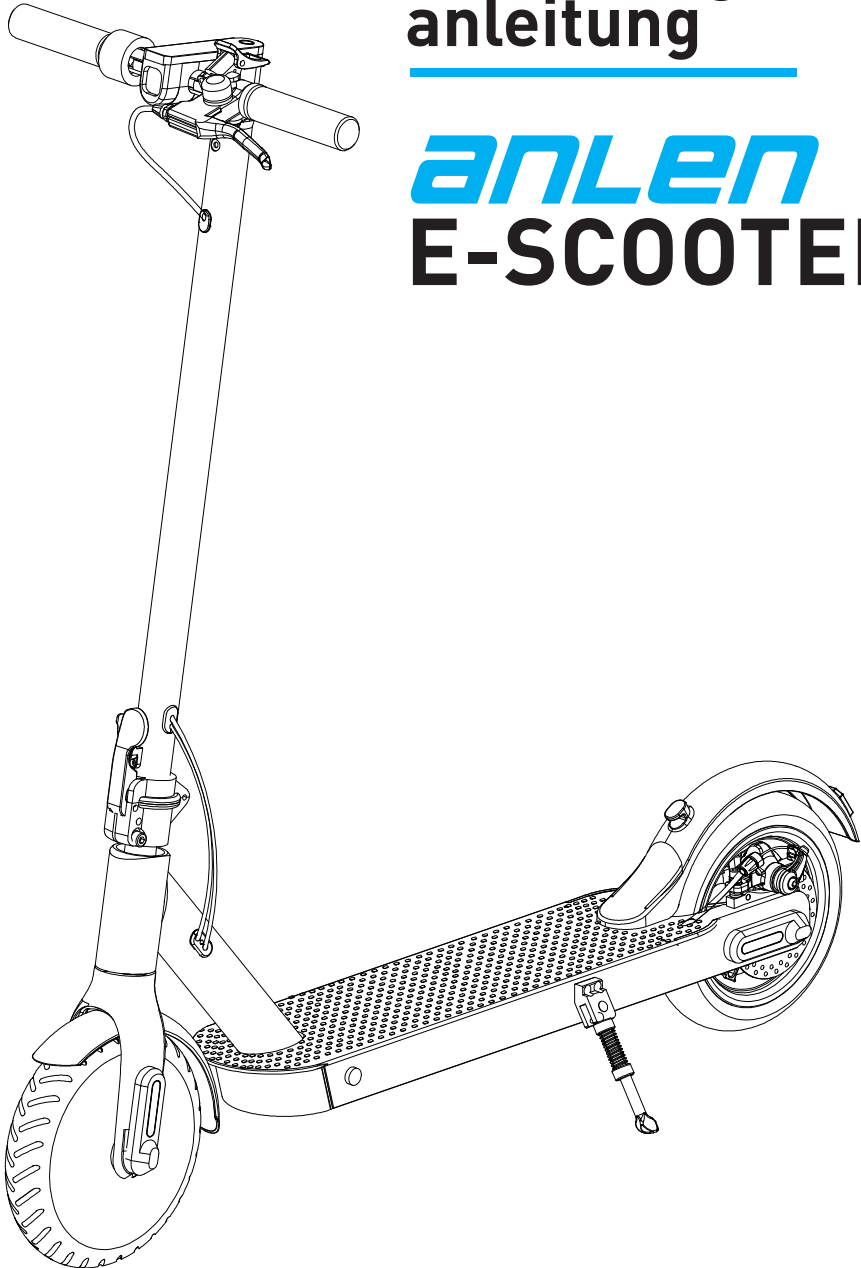


DE

1. Lieferumfang

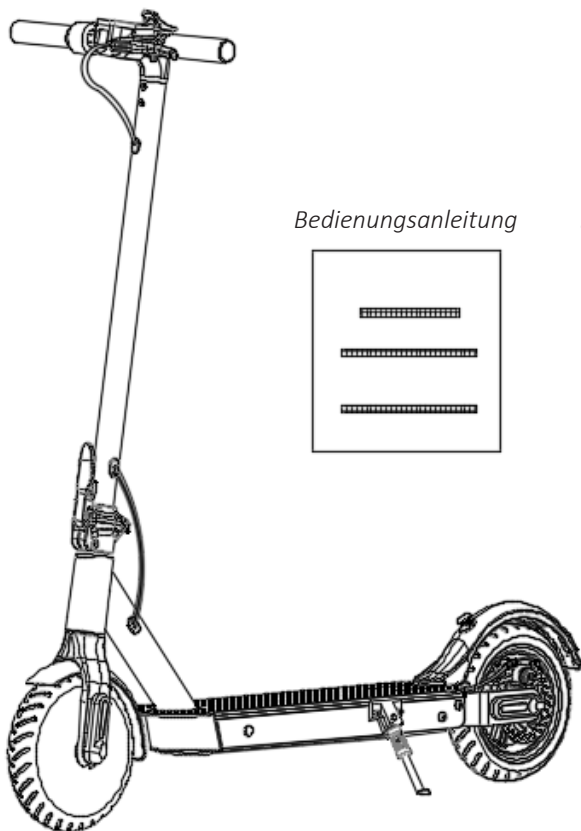


Bedienungsanleitung

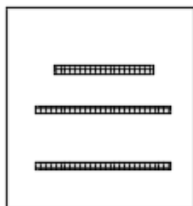

Befestigungsschrauben für die Lenkereinheit x 4



Inbusschlüssel

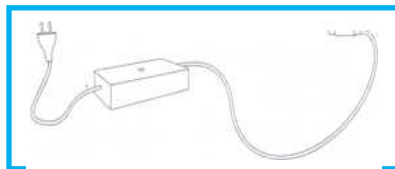


Ladegerät

Überprüfen Sie den Verpackungsinhalt sorgfältig. Falls etwas fehlt oder beschädigt ist, wenden Sie sich bitte an Ihren Fachhändler.

2. Technische Daten


Abmessungen (L/B/H)	1080*430*1140mm fahrfertig / 490mm zusammengeklappt
Gewicht	12.7KG
Max. Zuladung (Faher + Gepäck)	100KG
Max. Geschwindigkeit	20KM/H
Reichweite	15-18KM (bei 25° / 15km/h / 65kg Zuladung)
für Untergrundarten	asphaltierte Straßen
Spannung (DC)	36V
Max. Ladespannung (VDC)	42V
Ladestrom (A)	1.5A
Ladedauer	5-6H
Nennleistung (W)	250
Max. Leistung (W)	500W

3. Produktübersicht

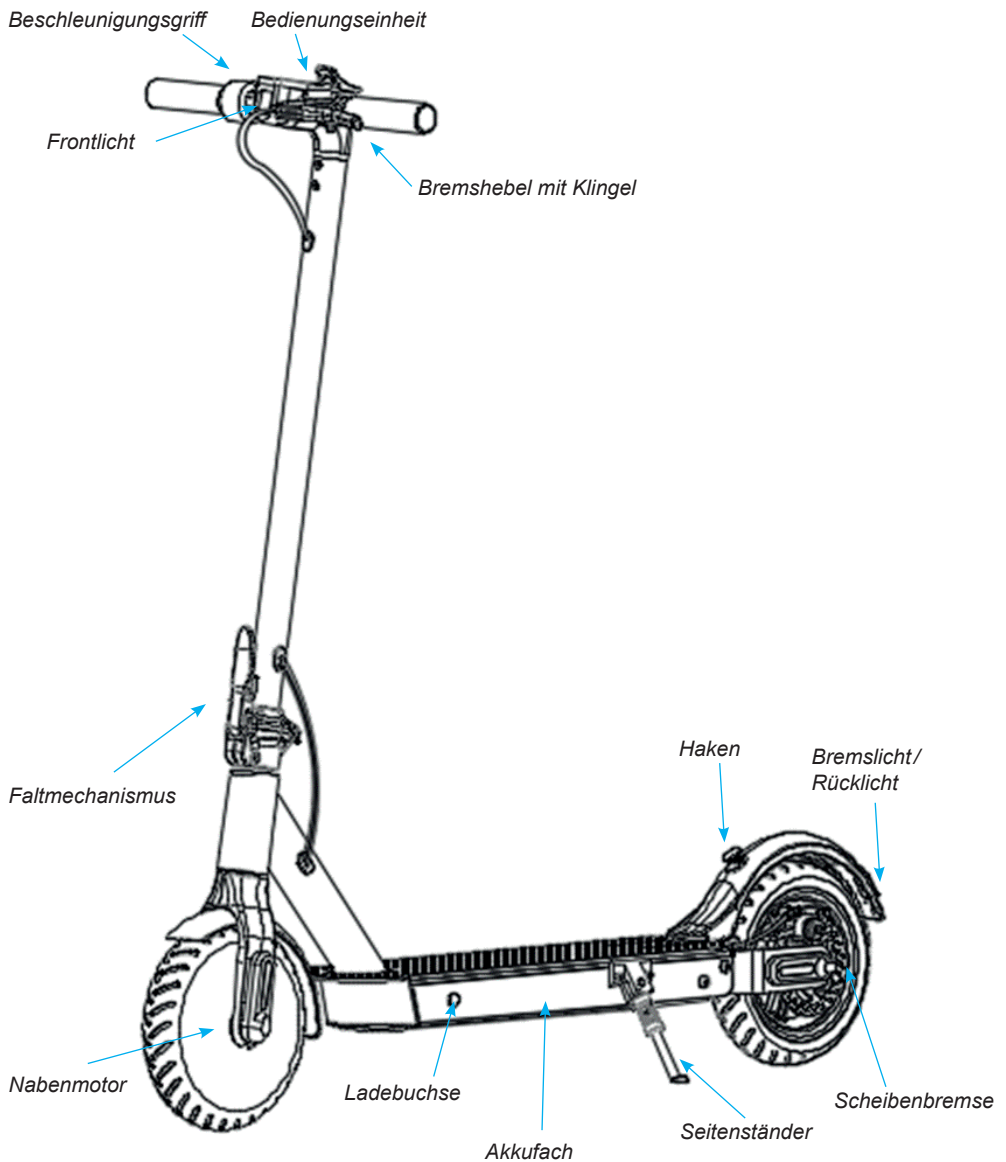


4. Montage

1

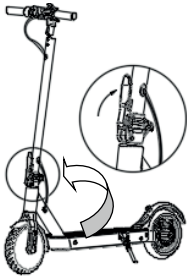


Richten Sie das Steuerrohr auf. Danach schließen Sie den Schnellspannhebel. Prüfen Sie vor jeder Fahrt, ob das Steuerrohr arretiert ist.

2

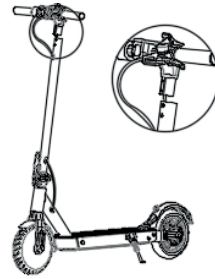



Verbinden Sie das Kabel aus Steuerrohr und Lenkereinheit mit dem Clipverschluss und montieren Sie die Lenkereinheit.

3

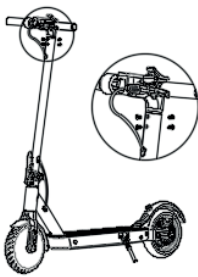


Montieren Sie die 4 Befestigungsschrauben (liegen im Beipack-Karton) mit einem Drehmoment von **5Nm**.


Ladevorgang

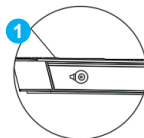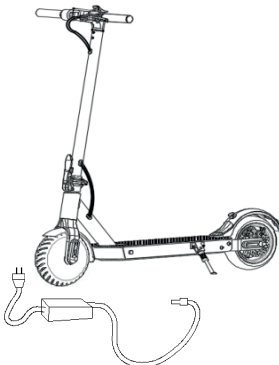

Öffnen Sie den Gummistopfen

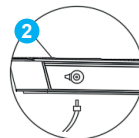


Stecken Sie das Ladekabel in die Ladebuchse

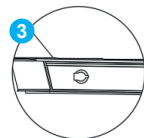


Nach dem Aufladen setzen Sie den Gummistopfen wieder ein

5. Die Bedienungseinheit

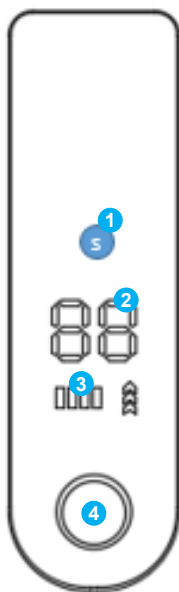


Modusanzeige 1	Eco-Modus (grün / max. Geschwindigkeit 12 km/h) Speed-Modus (rot / max. Geschwindigkeit 20 km/h)
Geschwindigkeitsanzeige 2	Zeigt die momentane Geschwindigkeit an
Batterie-Ladestandsanzeige 3	4 Balken: Ladestand 75% - 100% 3 Balken: Ladestand 74% - 50% 2 Balken: Ladestand 49% - 25% 1 Balken: Ladestand 24% - 0% Wenn die Ladestandsanzeige blinkt, ist die Batterie fast leer. Bitte schnellstmöglich aufladen Wenn die Batterie leer ist, erlischt die Anzeige und der E-Antrieb ist nicht mehr verfügbar.
Bedienknopf 4	1X drücken: schaltet den E-Scooter ein 1X drücken: Licht an/aus Doppelklick: Wechsel zwischen Eco-Modus und Speed-Modus 1X für ca. 2 Sekunden drücken: schaltet den Scooter aus.

6. Tipps zum Fahren

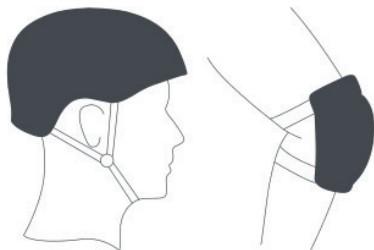

Tragen Sie beim Fahren einen Helm und Knieschoner.

1

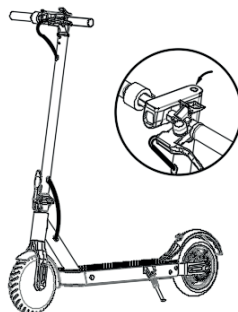


Prüfen Sie den Batteriestatus und die Funktion der Bremsen vor jeder Fahrt.

2




Stellen Sie sich auf das Trittbrett und stoßen Sie sich nach vorne ab.

3

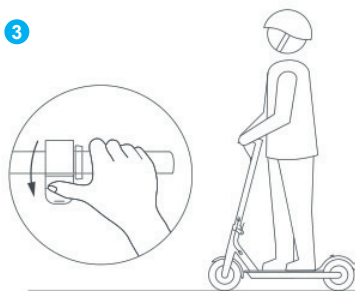


bei etwa 5km/h setzt der E-Antrieb ein. Steuern Sie die gewünschte Geschwindigkeit mit dem Beschleunigungsgriff

4

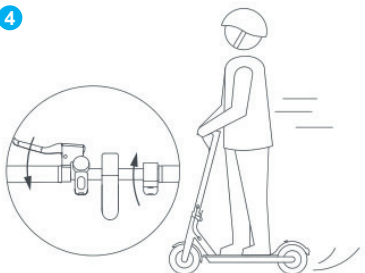

Wenn Sie den Beschleunigungsgriff loslassen, stoppt der E-Antrieb die Unterstützung und die Rekuperationsfunktion des Motors setzt ein. Zum Anhalten betätigen Sie den Bremshebel. Dieser bedient sowohl die Motorbremse vorne als auch die Scheibenbremse hinten.

5

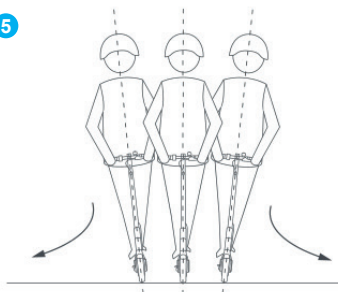


Verlagern Sie das Gewicht etwas, wenn Sie Kurven fahren


7. Sicherheitshinweise

- Bitte machen Sie nach dem Kauf eine Probefahrt in einer geschützten Umgebung ohne Verkehr. Benutzen Sie den Scooter erst an öffentlichen Orten, wenn Sie das Fahrzeug sicher beherrschen.
- Dieser E-Scooter ist ein Sport- und Freizeitgerät. Sobald Sie ihn an öffentlichen Orten benutzen, setzen Sie sich und andere den üblichen Gefahren im Verkehr aus. Bitte befolgen Sie die lokalen rechtlichen Vorschriften zum Gebrauch von E-Scootern in Ihrem Heimatland.
- Je schneller der Scooter fährt, desto länger ist der Bremsweg. Fahren Sie vorausschauend und passen Sie ihre Geschwindigkeit der Umgebung sowie der Witterung und den Straßenverhältnissen an.
- Nehmen Sie stets Rücksicht auf Fußgänger und andere Verkehrsteilnehmer. Kündigen Sie Überholvorgänge durch Klingelzeichen an. Überholen Sie mit angepasster Geschwindigkeit. Beachten Sie, dass Fußgänger die Laufrichtung oft unvermittelt und ohne Ankündigung ändern und halten Sie dementsprechend Abstand.
- Befolgen Sie stets die Sicherheitshinweise in dieser Bedienungsanleitung, insbesondere in Ländern ohne Regularien für die Benutzung von E-Scootern.
- Verleihen Sie diesen E-Scooter niemals an Personen, die mit dem korrekten Umgang damit nicht vertraut sind.
- Überprüfen Sie den E-Scooter vor jedem Gebrauch. Falls Sie lose, defekte oder verschlissene Teile oder seltsame Geräusche bemerken, benutzen Sie den E-Scooter bitte nicht mehr. Überprüfen Sie den festen Sitz aller Schrauben vor jeder Fahrt, und ziehen Sie sie ggf. fest. Im Zweifel kontaktieren Sie bitte Ihren Fachhändler.

8. Zusammenklappen und Tragen

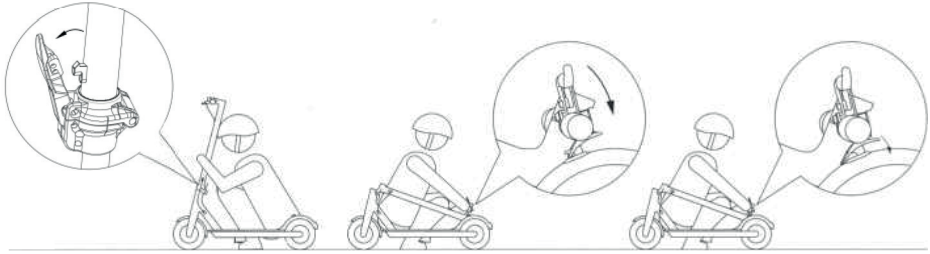

Stellen Sie sicher, dass der E-Scooter ausgeschaltet ist. Öffnen Sie den Schnellspannhebel des Faltmechanismus und klappen Sie das Steuerrohr nach hinten. Arretieren Sie den Hebel am Lenker im Haken auf dem hinteren Schutzblech.

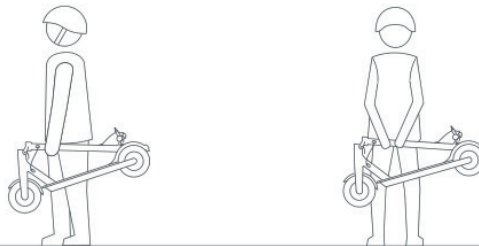

Carry

Tragen Sie den E-Scooter am Steuerrohr.

9. Pflege und Wartung

Reinigung und Lagerung

Vergewissern Sie sich, dass der E-Scooter ausgeschaltet ist und die Gummiabdeckung der Ladebuchse korrekt sitzt.

Reinigen Sie den E-Scooter mit einem feuchten Lappen. Benutzen Sie zum Reinigen niemals aggressive Reinigungsmittel wie Alkohol oder Benzin. Diese könnten die Oberflächen angreifen. Benutzen Sie zum Reinigen niemals Hochdruckreiniger.

Lagern Sie den E-Scooter nicht im Freien. Setzen Sie den E-Scooter niemals Temperaturen über 50°C oder unter -20° aus.


Hinweise zum Umgang mit dem Akku

- 1 Benutzen Sie ausschließlich den originalen Akku und das originale Ladegerät
- 2 **Warnung - Gefahr!** Öffnen Sie niemals das Akkufach und den Akku. Berühren Sie nicht die Kontakte und halten Sie Metallteile fern von den Kontakten. Sollten Sie den Akku ersetzen wollen, wenden Sie sich an Ihren Fachhändler.
- 3 Entsorgen Sie den E-Scooter und den Akku nicht im Hausmüll. Beachten Sie die nationalen Vorschriften zur Entsorgung in Ihrem Heimatland.
- 4 Laden Sie die Batterie nach jedem Gebrauch auf, um ihre Lebensdauer zu verlängern, oder spätestens nach 60 Tagen Lagerung ohne Gebrauch.

Setzen Sie den E-Scooter und den Akku niemals Temperaturen über 50° oder unter -20° aus und halten Sie ihn von Feuer fern.

- 6 Bitte beachten Sie, dass der Akku irreparabel beschädigt werden kann, wenn er über einen langen Zeitraum nicht geladen wird. Schäden dieser Art sind von der Garantie nicht abgedeckt. Bitte laden Sie den Akku bei Nichtgebrauch des E-Scooters regelmäßig auf wie oben beschrieben.

Hintere Scheibenbremsen einstellen

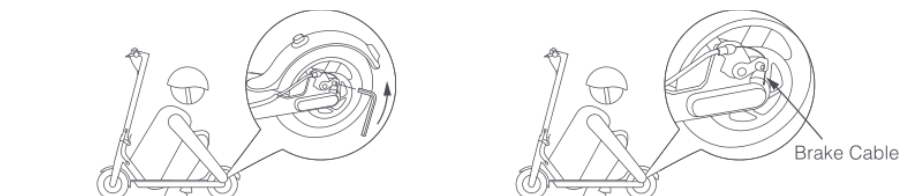

Sie können die Zugspannung mit dem Verstellrad am Bremssattel einstellen.

Sollte dies nicht ausreichen, gehen Sie bitte wie folgt vor:

1. Lösen der Zugklemmschraube mit einem 4mm Inbusschlüssel
2. Justieren Sie die Zugspannung
3. Ziehen Sie die Zugklemmschraube wieder fest (Drehmoment: 6Nm)

Hiermit erklärt Messingschlager GmbH & Co. KG, dass der E-Scooter Anlen E9X, Artikelnummer 659905 den Richtlinien 2014/35/EU; 2014/30/EU und 2011/65/EU(ROHS) entspricht.

*Der vollständige Text der EU-Konformitätserklärung ist unter folgender Internetadresse verfügbar:
<https://www.messingschlager.com>*

Sollten Sie Fragen haben oder weitere Informationen benötigen, wenden Sie sich bitte an unseren Kundendienst oder senden Sie uns eine E-Mail.

messingschlager

**Messingschlager GmbH & Co. KG,
Haßbergstraße 45
96148 Baunach
Germany**

**Tel: +49 (0)9544/944445
mail: kontakt@messingschlager.com
www.messingschlager.com**

DE