



1 Einstellung der Klemme

Details unter <http://www.superbiketool.com/>,
Click Product ➔ Work stand ➔ 1. ➔ TB-WS20

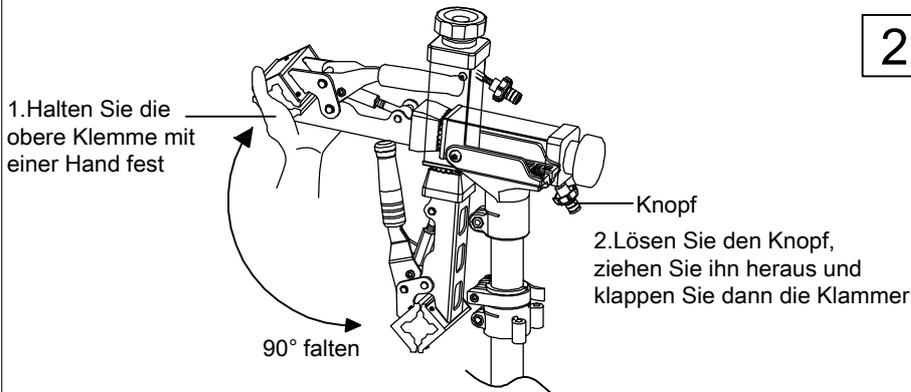

2 Werkzeugablage


1. Lösen Sie den Schnellspannhebel
2. Setzen Sie die Werkzeugablage in die Manschette (2 Löcher)
3. Befestigen Sie den Schnellspannhebel (siehe Bild 1)

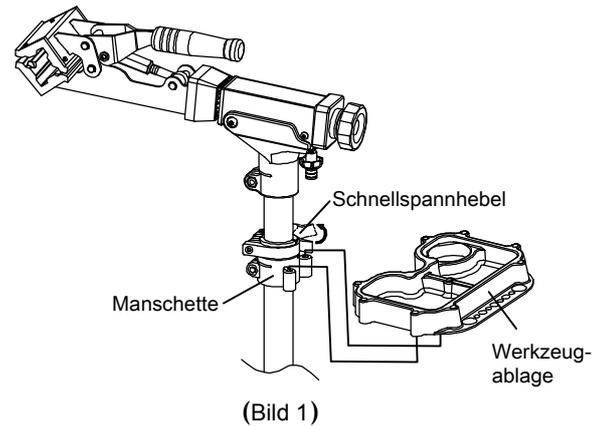

3 Universell verstellbarer Griff

Der universell verstellbare Griff kann stufenlos verstellt werden damit auch ein Arbeiten auf engstem Raum möglich ist:

1. Ziehen Sie den Griff heraus und drehen Sie ihn in die richtige Position (0° - 360°).
2. Lassen Sie den Griff los, damit er zum Anziehen oder Lösen automatisch wieder einrastet.


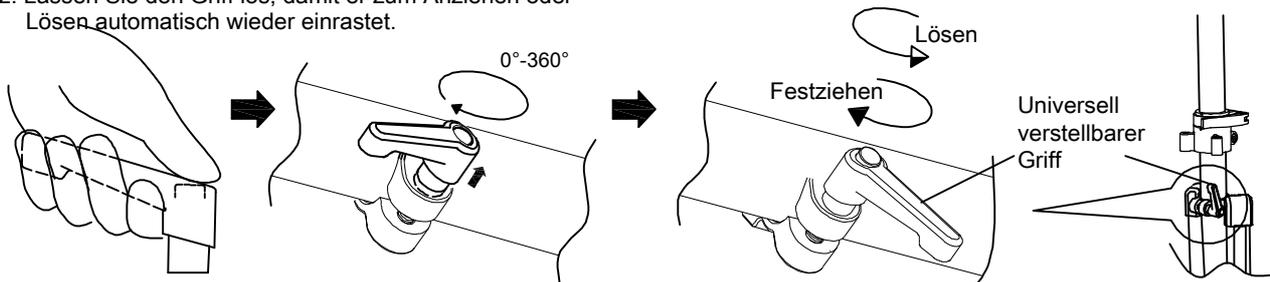


4 Stellen Sie die Klemme ein

1. Ziehen Sie den Griff nach oben, um die Klemme zu öffnen. (siehe Bild 2)
2. Setzen Sie den Rahmen in die Öffnung der Klemme ein (Oberrohr, Sitzrohr oder Standrohr), stellen Sie die Sechskant-Stellachse auf die richtige Position ein und drücken Sie den Griff dann nach unten, um den Rahmen zu halten.

Einstellung:


- 2-1. Drehen Sie die Sechskant-Stellachse im Uhrzeigersinn, um die Klemme festzuziehen, wodurch die Öffnung der Klemme kleiner wird. (siehe Bild 3)
- 2-2. Drehen Sie die Sechskant-Stellachse gegen den Uhrzeigersinn, um die Klemme zu lösen, wodurch die Öffnung der Klemme größer wird. (siehe Bild 3)

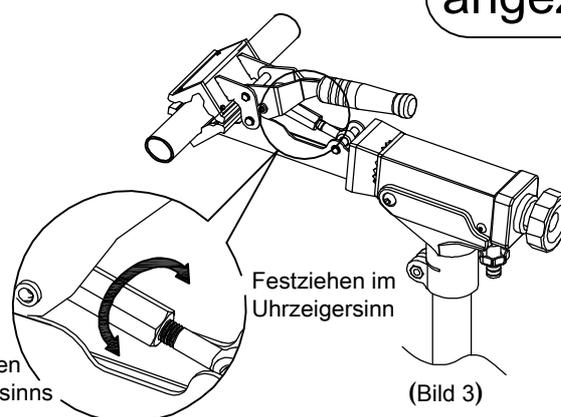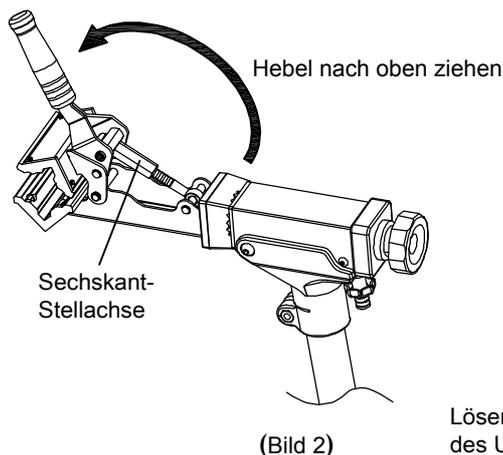

Vergewissern Sie sich, dass das Rohr vor der Arbeit fest angezogen ist


1 Clamp adjustment and folding

Visit operation detail at Super B
Website: <http://www.superbiketool.com/>,
Click Product ➔ Work stand ➔ 1. ➔ TB-WS20

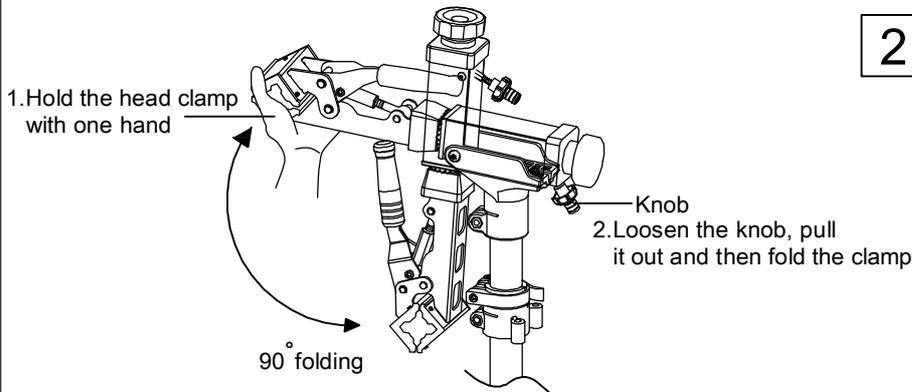

2 Tool tray assembly

1. Loosen the quick release lever.
2. Place the tool tray into the 2-ear (hole) collar. (see picture 1)
3. Fasten the quick release lever. (see picture 1)

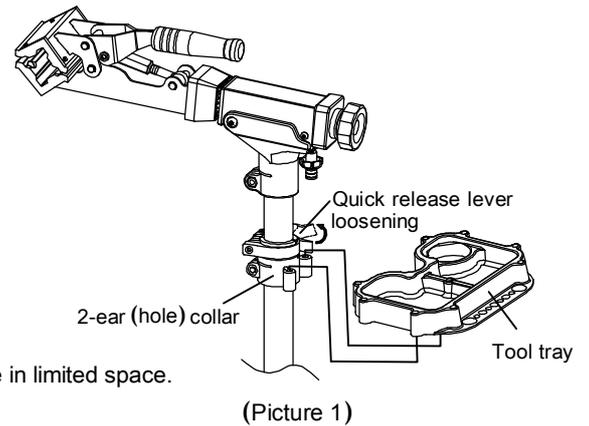


3 Universal adjustable handle instruction

Universal adjustable handle can be adjusted to any degree suitable to operate in limited space.

Application:

1. Pull the handle apart and rotate to proper position (0°-360°).
2. Release the handle to spring back in place automatically for tightening or loosening.

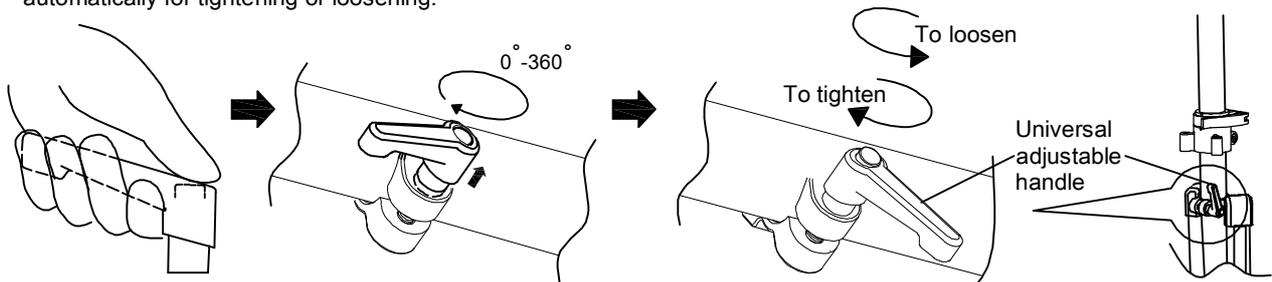


4 Adjust the clamp


1. Pull up the handle to open the clamp. (see picture 2)
2. Place the frame into the opening of the clamp (it could be the top tube, seat tube and standing tube) and adjust the hex adjusting shaft to proper position then press down the handle to hold the frame.

Adjustment:

- 2-1. Rotate the hex adjusting shaft clockwise to tighten the clamp properly, making the opening of the clamp smaller. (see picture 3)
- 2-2. Rotate the hex adjusting shaft counter-clockwise to loosen the clamp properly, making the opening of the clamp bigger. (see picture 3)

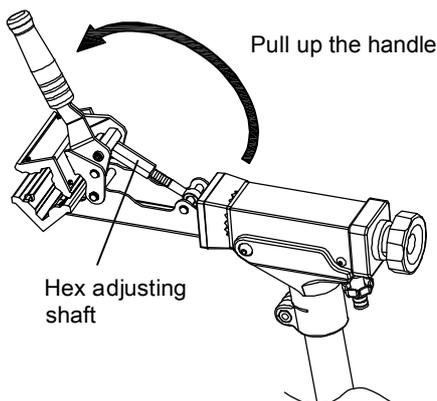

(Picture 2)

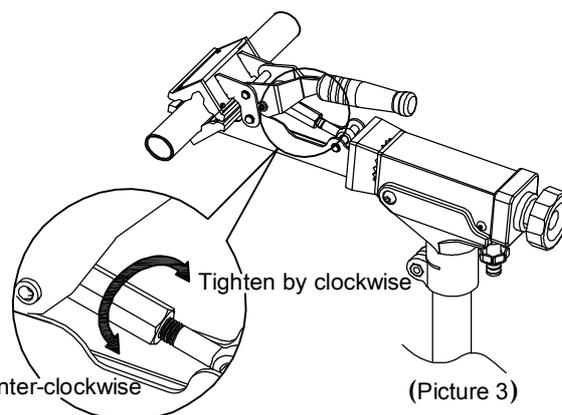

(Picture 3)

