

EN

Instruction:

The factory preset code is "0000". To open the lock, press the "Open" button.

To change the code, press and hold the "Set" button and enter your desired code. Once the new code has been set, release the "Set" button. Press the "Roll" button to adjust the cable length. Press the button to automatically retract the cable. To extend the cable, pull it out to the desired length and release the button.


Caution! Always hold the cable firmly while retracting it to prevent injury, as it retracts very quickly.

DE

Bedienungsanleitung:

Der werkseitig eingestellte Code lautet „0000“. Zum Öffnen des Schlosses drücken Sie die Taste „Öffnen“. Um den Code zu ändern, halten Sie die Taste „Einstellung“ gedrückt und geben Sie den gewünschten Code ein. Sobald der neue Code eingestellt ist, lassen Sie die Taste „Einstellung“ los. Drücken Sie die „Kabelaufrolltaste“, um die Kabellänge anzupassen. Durch Drücken der "Kabelaufrolltaste" wird das Kabel automatisch eingezogen. Zum Verlängern des Kabels ziehen Sie dieses manuell auf die gewünschte Länge heraus und lassen die Taste los.

Achtung! Halten Sie das Kabel beim Einziehen stets fest, um Verletzungen zu vermeiden, da es sich sehr schnell aufrollt.

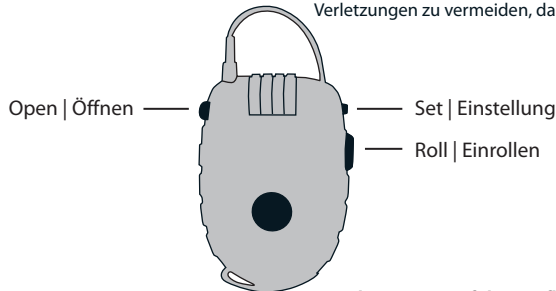

Keep for future reference!

Anleitung sorgfältig aufbewahren!

distributed by:

messingschlager

Messingschlager GmbH & Co. KG
Hassbergstr. 45
96148 Baunach - Germany
www.messingschlager.com



03/2026

