

Art. 479910




EN MANUAL

DE BEDIENTUNGSANLEITUNG



battery: CR2032

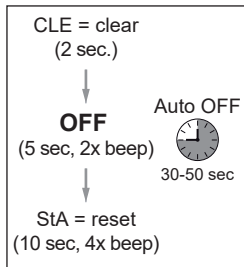

Attention! Insert correctly (+/-). Do not charge, do not disassemble, do not dispose of in fire, do not short circuit. Keep away from children. Do not use following batteries at the same time: old and new, half full and full, different brands and capacities. Remove immediately from device if not in use or the batteries are empty. Dispose of defective and empty batteries properly (hazardous waste).

Achtung! Polaritäten (+/-) beachten! Batterien nicht aufladen, nicht öffnen, nicht ins Feuer werfen oder kurzschließen. Von Kindern fernhalten. Folgende Batterien nicht gleichzeitig verwenden: alte und neue, halbvolle und volle, verschiedene Marken und Kapazitäten. Unverzüglich aus dem Gerät nehmen, wenn ungenutzt oder leer. Defekte und leere Batterien ordnungsgemäß entsorgen (Sondermüll).

distributed by:

messingschlager

Messingschlager GmbH & Co. KG
Hassbergstr. 45
96148 Baunach - Germany
www.messingschlager.com



Keep for future reference! | Anleitung sorgfältig aufbewahren!

04/2025

