Owner's Manual

Original Manual - keep in a safe place for future reference

You should not use the trailer if you have not read and understood the contents of this Owner‘s Manual. Failure to heed this warning may result in serious or fatal injury.

The bicycle trailer can be attached to bicycles with a tire size of 20" to 28".

- Our bicycle trailers are designed only for the transport of luggage. Do not transport children or animals.
- Maximum load capacity is 30 kg (65 lbs)
- Always be aware that the greater the load of the trailer, the greater the effect will be on the handling and braking distance of the bicycle.
- Luggage must be securely fastened.
- Before each journey, check to make sure the bicycle brakes work properly.
- Do not exceed a speed of 40 km/h (25 mph) when traveling with the trailer. Be aware that your bicycle is now an extra 140 cm (55") long.
- Be sure that your bicycle is capable of pulling the bicycle trailer. Ask your bicycle dealer or read the manufacturer instructions for proper use.
- The trailer load may not exceed 45 cm (18") in height.

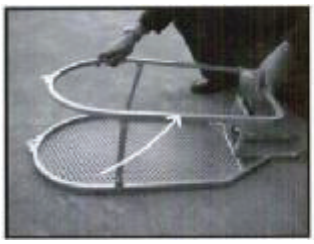

Pull up the frame stand.

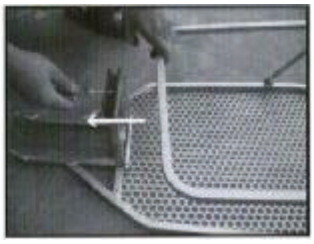

Remove the pin.

Place the frame into the stand. Insert the pin through the hole and lock in place.

Frame and stand assembled

Loosen the quick release pin to prepare for the rear wheel assembly.

Secure the fender to the rear of the frame.

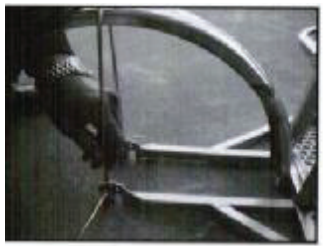

Assemble the fender.

Attach the rear wheel to the trailer rear fork using the quick release pin.

Remove the connecting spindle from the front fork assembly.

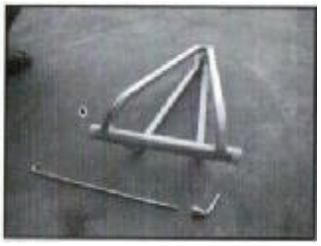

Front fork parts

Secure the trailer frame to the front fork using the connecting spindle.

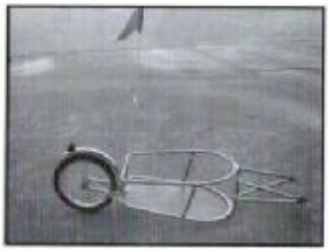

Insert the safety flag. The trailer assembly is finished.

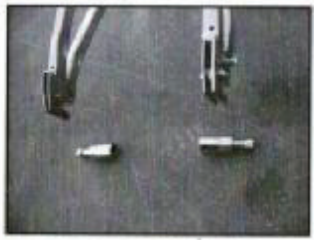

Different adapters are available for different bikes.

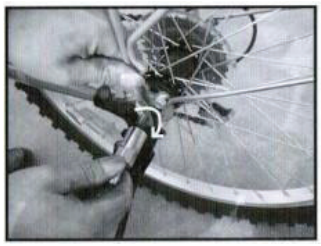

For bikes that don't use the quick release, tighten the screw.

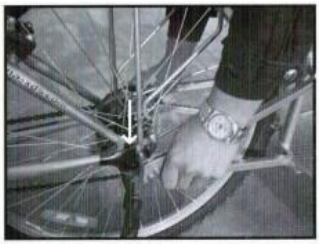

Attach the assembled trailer to the quick release mechanism.

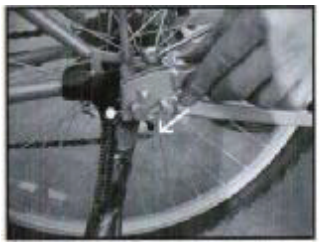

Push down the safety lock to secure the trailer to the bike.

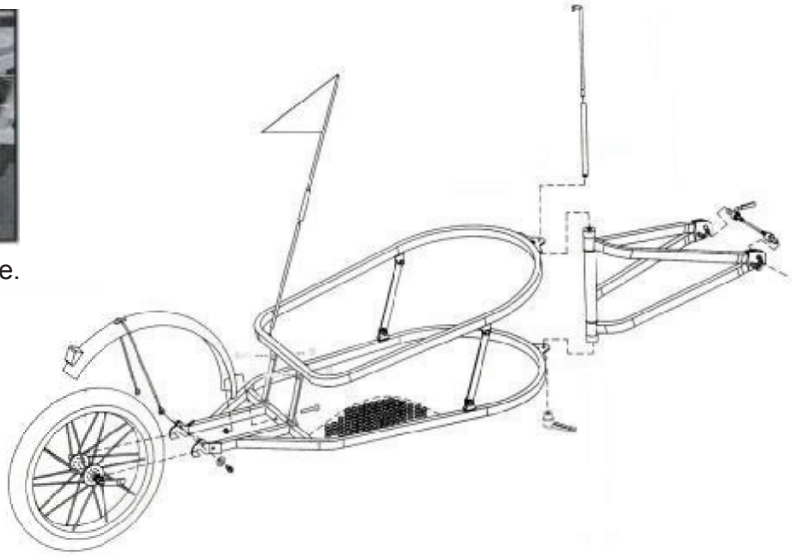

Optionally: Model with bag (art. 640081)

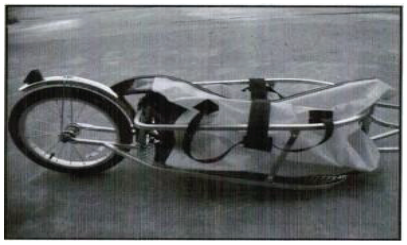

Attach the bag to the trailer frame.

GEBRAUCHSANLEITUNG

Original Gebrauchsanleitung - sorgfältig aufbewahren

Benutzen Sie den Anhänger nicht, wenn sie den Inhalt dieser Bedienungsanleitung nicht gelesen und verstanden haben. Das Missachten dieser Warnung kann zu ernsthaften Verletzungen führen.

Der Anhänger kann an Fahrräder mit einen Reifengröße von 20" bis 28" angebracht werden.

- Unsere Fahrradanhänger sind nur zum Transport von Gepäck konzipiert.
- Transportieren Sie mit dem Anhänger keine Kinder oder Tiere.
- Die maximale Ladekapazität beträgt 30kg
- Die Ladung muss sicher fixiert werden.
- Bedenken Sie stet: Je schwerer die Ladung, desto mehr wirkt sich diese auf Fahrverhalten und Bremsweg aus.
- Stellen Sie vor jeder Fahrt sicher, dass die Bremsen ordnungsgemäß funktionieren.
- Fahren Sie mit dem Anhänger nicht schneller als 40 km/h.
  Bedenken Sie, dass ihr Fahrrad mit dem Anhänger 140 cm länger ist.
- Stellen Sie sicher, dass ihr Fahrrad zur Anhängernutzung geeignet ist. Zur ordnungsgemäßen Nutzung fragen Sie ihren Fahrradhändler oder lesen Sie die Herstelleranweisungen ihres Fahrrads.
- Die maximale Ladehöhe darf 45cm nicht überschreiten.

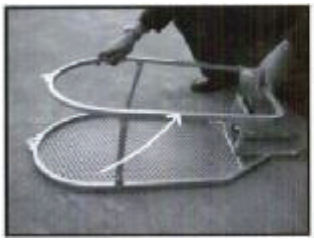

Stellen Sie den Standrahmen auf

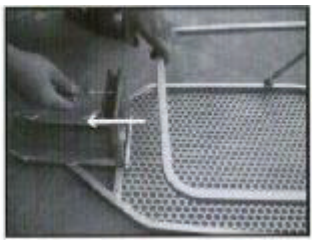

Entfernen Sie den Bolzen

Platzieren Sie den Rahmen im Untergestell. Stecken Sie den Bolzen wieder zurück und sichern diesen.

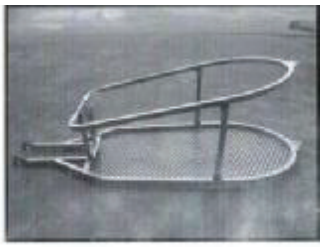

Rahmen und Untergestell montiert.

Lösen Sie den Schnellspannerbolzen um diesen für die Montage am Hinterrad vorzubereiten.

Befestigen Sie das Schutzblech an der Rückseite des Rahmens.

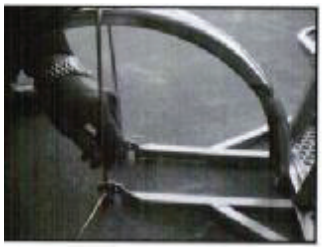

Montieren Sie das Schutzblech

Befestigen Sie das Hinterrad am der Anhängergabel mit dem Schnellspannerbolzen.

Entfernen Sie den Verbindungsstab.

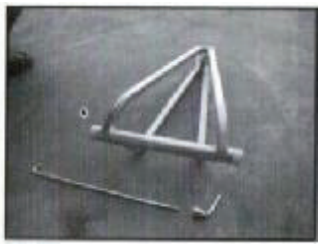

Vordere Gabel.

Befestigen Sie den Rahmen an der vordere Gabel mit dem Verbindungsstab.

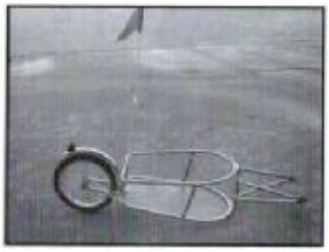

Sicherheitsflagge einstecken.

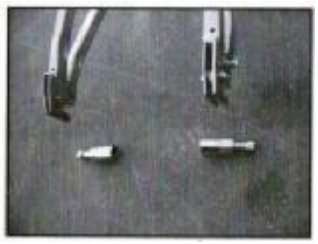

Es sind verschiedene Adapter für Fahrräder erhältlich.

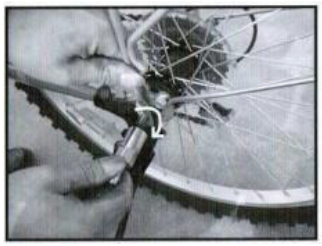

Bei Fahrrädern ohne Schnellspanner, ziehen Sie die Schraube fest.

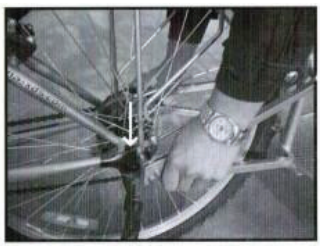

Befestigen Sie den montierten Anhänger mit dem Schnellspannermechanismus.

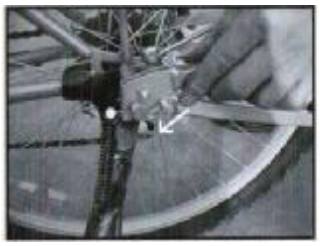

Drücken Sie die Sicherheitsverriegelung nach unten um den Anhäng
Fahrrad zu fixieren.

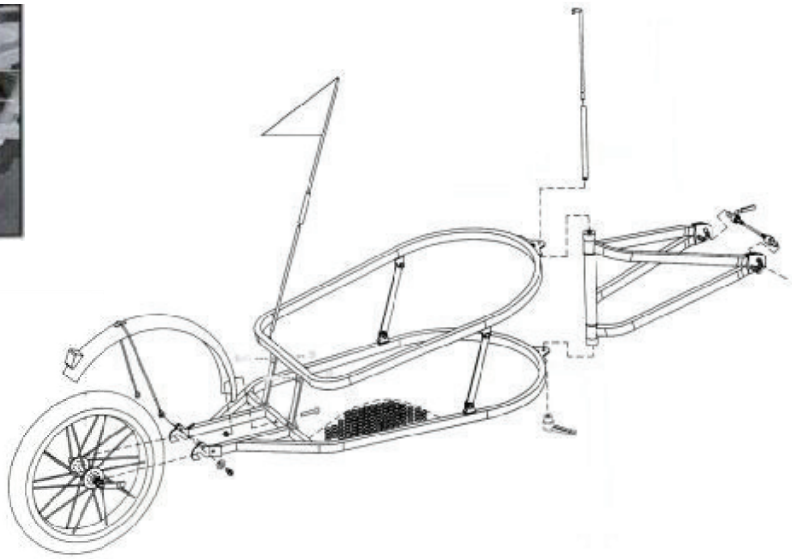

Optional: Modell mit Tasche (Art. 640081)

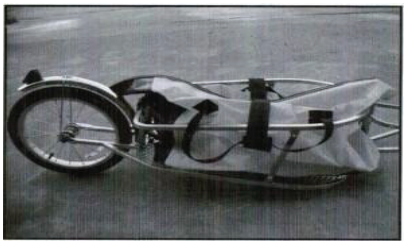

Befestigen Sie die Tasche am Rahmen.